Ex Safety and Installation Instructions GS020 Wind Sensor



Load Systems International 2666 Boul du Park-Technologique Québec QC G1P 4S6 Canada www.loadsystems.com

SCOPE

This Ex instruction manual must be read and used by qualified personnel during system design and installation of the GS020 Wind Sensor. These instructions are provided as an addendum to the standard product manuals.



Warning

The GS020 is a Group IIC Ex ia certified intrinsically safe apparatus which may be installed in Hazardous Area Zone 0, Zone 1 or Zone 2.

The GS020 must be operated within environmental limitations.

The GS020 must only be installed by qualified personnel in accordance with the relevant international installation standards

The GS020 cannot be repaired by the end user thus any units exhibiting a failure must be returned to the manufacturer.

SAFETY ANALYSIS

In a system safety analysis, always check that the Hazardous Area / Hazardous location devices conform to the relevant standards.

INSTALLATION

The GS020 is fully self-contained and require no special grounding techniques. They have an IP rating of 65 with fully potted internal electronics and are intended to be mounted outdoors.

OPERATION

The GS020 is battery-powered stand-alone devices with no interconnecting cables.

Proper operation of the GS020 is indicated by a green LED flashing periodically. Failure of the LED flashing can indicate either a dead battery or no receiver is present within RF Range.

STARTUP

The GS020 contains a battery and will automatically power on and off when a remote receiver is detected, thus there are no power cables or power switches.

When a GS020 detects a remote receiver the green LED will flash on and off periodically. This indicates successful communication with the remote receiver.


If there is not a green LED flashing periodically it means either there is not a remote display turned on or the internal battery is dead.

BATTERY REPLACEMENT PROCEDURE


Only the battery specified here may be used as a replacement:

LSI ORDER CODE	MANUFACTURER	MANU PART NUMBER	DESCRIPTION
TB015	TADIRAN	TL5930	3.6V 19AHr Lithium D-cell


- Step 1) Remove the two screws securing the battery cover to sensor body.
- Step 2) Remove the battery cover by gently prying with a flat bladed screwdriver.

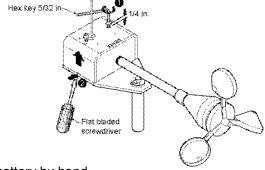

- Step 3) Remove the battery by hand.
- Step 4) Remove the existing silicone from the sensor body and the battery cover.
- Step 5) Install the new battery. Insert the positive end and then push in the direction of the positive pole.

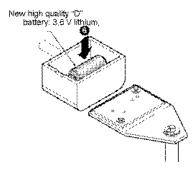

Step 6) Apply a non-corrosive silicone RTV bead around the edge of the cover plate ensuring the bead is continuous with no bubbles or breaks.

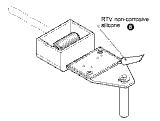

- Step 7) Re-position the battery cover on the sensor body.
- Step 8) Insert the screws, **DO NOT OVERTIGHTEN.**

Title	Ex Safety and Installation Instructions, GS020 Wind Sensor	Doc No	CMO10	Vor	2
Title	Ex Safety and Installation Instructions. GS020 Wind Sensor	L Doc No	GM013	veri	_

ADDITIONAL REQUIREMENTS FOR SAFE USE



Ignition hazard: "WARNING - POTENTIAL ELECTROSTATIC CHARGING HAZARD"

Maintenance:

Wind cups are made from lexan, an isolated material. Manipulate with caution. Rubbing of other isolated material against the wind cups could create electrostatic charges, an ignition hazard. If cleaning is required, bring the wind speed sensor in a non-hazardous area.

STORAGE

The ambient temperature may exceed the lower operating temperature limit of -20°C without damage for limited periods of time such as may be experienced during air transport. The lower operating temperature limit is not to be exceeded during operation.

DISPOSAL

Please separate and dispose of electronic goods responsibly and follow guidelines and regulations for your region.

SPECIFICATIONS

Compliance	ATEX Certificate Number	Sira 14ATEX2332X
	Temperature Classification	T4, -20°C < Tamb <+75°C
Product Markings	ATEX	Ex ia IIC T4
		-20°C ≤ Ta ≤ +75°C
		Sira 14ATEX2332X
		€ x I 1 G
Quality Assurance Notifica	ation	TRAC12QAN0007
LED Indicators	Communicating	Green
Power Supply	Voltage	3.6 VDC nominal
	Current	30 milliamps
Physical	Dimensions	385mm x 100mm x 65mm (l x w x d)
	Weight	1.0 kg
	Material	AISI 304
	IP Rating	65
Environmental	Operating Temperature	-20°C to +75°C
	Humidity	0 to 99%
FCC ID	(GS020-ATEX-10 model only)	QVBGS000

Ti	tle	Ex Safety and Installation Instructions	s, GS020 Wind Sensor	Doc No	GM013	Ver	2

INSTALLATION CONTROL DRAWING

	Hazardous Area	Hazardous Area	Safe Area
E	x ia IIC T4 -20°C < Tamb < +75°C Sira 14ATEX2332X	Ex d IIB T4 -30°C < Tamb < 60°C TRAC12ATEX0040X	n/a
	GS020 Wind Sensor	GS820-10	LSI A BOOK AND
Note	es:	Notes:	Notes:
	Operating temperature range -20°C < Tamb < +75°C	1) Operating temperature range -30°C < Tamb < +60°C	1) Operating temperature range -30°C < Tamb < +60°C
	Installation and maintenance must only be done by competent personnel	2) See Installation Instruction GM820- 10&11_rev1_20120902	Installation and maintenance must only be done by competent personnel
,	Battery replacement shall only be accomplished if no explosive gas may	Installation and maintenance must only be done by competent personnel	Installation shall be in accordance local regulations as may be required
4)	ne present Installation shall be in accordance with 60079.14 and other local regulations	4) GS820-xx must be returned to factory for service	Dissimilar metal contact should be avoided.
5)	as may be required I Dissimilar metal contact should be	 Installation shall be in accordance with 60079.14 and other local regulations as may be required I 	
6)	avoided. STATIC HAZARD. Remove from Hazardous Zone for cleaning.	Dissimilar metal contact should be avoided.	

EU Declaration of Conformity

Manufacturer's Name: Trimble Navigation, Ltd.

Manufacturer's Address: 2666 boul. du Parc Technologique, Suite 190

Québec, QC, Canada, G1P 2J7

Object of the declaration:

MODEL No.	DESCRIPTION	MODEL VARIATIONS
		xx (nil) = Standard Software version
GS020-xx-ATEX-yy	Wind Sensor	01, 02, etc. = Alternate Software
		yy 10 = 903-927 MHz Transceiver
		11 = 868-869 MHz Transceiver

Product Marking:



II 1 G Ex ia IIC T4 Ga Tamb: -20°C to +75°C (6 0891

We, the manufacturer, declare under our sole responsibility that the products to which this declaration refers are in conformity with the essential requirements and other relevant requirements of the following European Directives:

2014/34/EU	ATEX Directive
------------	----------------

In accordance with the conformity assessment procedures described in Annex III and VII of the ATEX Directive, the listed products are covered by:

Sira 14ATEX2332X	EC Type Examination Certificate delivered by Sira Certification Service (NB 0518)
TRAC12QAN0007	Product Quality Assurance Notification delivered by Trac Global (NB 0891)

The following harmonized standards were applied:

EN 60079- 0:2012/A11:2013	Explosive atmospheres. Equipment - General requirements
EN 60079-11:2012	Explosive atmospheres. Equipment protection by intrinsic safety 'i'
EN 60079-26:2007	Explosive atmospheres. Equipment with Equipment Protection Level (EPL) Ga

Québec, April 20th, 2016

Marc Chouinard, Eng. Ex Responsible

Title	Ex Safety and Installation Instructions, GS020 Wind Sensor	Doc No	GM013	Ver	2



Document Revision History

Revision History

Rev	Description	Approved
1	Draft Release. Created from scheduled drawing UM009	M. Chouinard
2	Update to the declaration of conformity	M. Chouinard

This manual is in accordance with the scheduled drawing "UM009" revision 0.3.

Any changes to this document must be approved by the Hazardous Area Systems Manager